



# Einhell

## PROFESSIONAL



### Top-handled Cordless Chain Saw

### FORTEXXA 18/20 TH

Item No.: 4600020

Ident No.: 21011

Bar Code: 4006825663099

The Einhell FORTEXXA 18/20 TH top-handled cordless chainsaw is a member of the Power X-Change family. This chainsaw is powered by a brushless electric motor; it comes equipped with a high-quality OREGON rail and chain and has a tool-less chain tensioning + changing facility.

**WARNING:** This chainsaw may only be used by fully trained tree care personnel. Use without training could lead to serious injuries.

This product comes without a battery (2.5 Ah recommended) or charger.

## Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Einhell Brushless Motor
- High-quality chain and bar from OREGON
- Ideal for trimming and tree care
- Tip guard for prevention of kickback
- Kickback protection with instant chain brake
- Toolless chain tensioning and changing
- Handy, light and ergonomic
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain lubrication
- Chain catcher
- Top-handled chainsaw for fully trained tree care personnel
- Recommendation for optimum results: 2.5 Ah rechargeable battery
- Supplied without battery and charger (available separately)



## Technical Data

- |                       |        |
|-----------------------|--------|
| - Sword length        | 200 mm |
| - Max. cutting length | 140 mm |
| - Chain cutting speed | 7 m/s  |
| - Oil tank capacity   | 75 mL  |

## Logistic Data

- |                                      |                    |
|--------------------------------------|--------------------|
| - Product weight (kg)                | 2.54               |
| - Gross weight (kg)                  | 3.13               |
| - Dimensions single packaging        | 291 x 248 x 210 mm |
| - Pieces per export carton           | 4 Pieces           |
| - Gross weight of export carton      | 13.5 kg            |
| - Dimensions export carton           | 335 x 240 x 210 mm |
| - Container quantity (20"/40"/40"HC) | 1440   2980        |



## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 2  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 4,0Ah Power X-Change 2  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



Ersatzschwert 20cm 1,1  
Chain Saw Accessory  
Item No.: 4500194  
Bar Code: 4006825664560  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 2  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



Ersatzkette 20cm 1,1 33T 3/8  
Chain Saw Accessory  
Item No.: 4500193  
Bar Code: 4006825664577  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

# Battery-Running-Times



sawing<sup>1</sup>  
(pieces)

One Battery for All	
1.5 Ah	60
2.0 Ah	80
2.5 Ah	100
3.0 Ah	120
4.0 Ah	160
5.2 Ah	210
6.0 Ah	240

For best performance select a battery with at least 2.5 Ah

**Test setup:**

1) wood - scantling 70x70 mm