







GE-CF 18/2200 Li

Item No.: 3408035

Ident No.: 21011

Bar Code: 4006825665253

OWER X-CHANGE

The Einhell cordless fan GE-CF 18/2200 Li is a breath of fresh air. The cordless device can be used anywhere, ensuring air supply or distribution of air flows. The fan is a member of the Power X-Change family. The battery can be used in more than 200 Einhell devices. Compact and portable, the cordless fan is intended for both outdoor and indoor use. The adjustment on the fan head is infinitely variable. Thanks to numerous fastening options, use is universal. There are three stages for adjusting the air flow. Up to 18 hours of battery life possible with a 5.2 Ah PXC battery. Delivery does not include battery or charger (sold separately).

Features & Benefits

- A member of the Power X-Change family, 1x 18V batteries required
- Compact, portable cordless fan for indoor and outdoor use
- Infinitely variable adjustment of the fan head
- Universal use thanks to numerous fastening options
- 3 settings for adjusting the air flow
- Runs for up to 18 hours with one 5.2 Ah PXC battery
- Supplied without a battery and charger (available separately)

Technical Data

2200 - 1200 min^-1 - No-load speed - Wind speed 15000 m/h - Fan diameter 180 mm - Swiveling range 0 - 360°

Logistic Data



















Available as special accessories



18V 4-6Ah Multi-Ah PXC Plus

Battery Item No.: 4511502

Bar Code: 4006825644210 Einhell Accessory

18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396

Bar Code: 4006825610376

Einhell Accessory



2x2 Power X-Quattrocharger 4A

Charger

Item No.: 4512102

Bar Code: 4006825649536

Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103

Bar Code: 4006825650228 Einhell Accessory



Power X-Twincharger 3A

Charger

Item No.: 4512069

Bar Code: 4006825629729 Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB

Battery Item No.: 4511524 Bar Code: 4006825656206

Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1 Battery Item No.: 4511489

Bar Code: 4006825638578

Einhell Accessory



18V 4,0Ah Power-X-Change Plus

Battery

Item No.: 4511553

Bar Code: 4006825660869

Einhell Accessory



18V 3,0Ah Power X-Change Plus

Battery

Item No.: 4511501

Bar Code: 4006825644197

Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395

Bar Code: 4006825610369

Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042

Bar Code: 4006825613704

Einhell Accessory



18V 2,5Ah Power X-Change

Battery

Item No.: 4511516

Bar Code: 4006825650518

Einhell Accessory



18V 5,2Ah Power X-Change Plus

Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power X-Car Charger 3A

Charger

Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack

Battery Item No.: 4511526 Bar Code: 4006825656695

Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681

Einhell Accessory



Power X-Boostcharger 6A

Charger Item No.: 4512064

Bar Code: 4006825629019

Einhell Accessory



18V 3,0 Ah Power-X-Change 2

Battery Item No.: 4511341

Bar Code: 4006825590593

Einhell Accessory