



Cordless Circular Saw

TP-CS 18/165 Li BL - Solo

Item No.: 4331225

Ident No.: 21013

Bar Code: 4006825677881

The Einhell Professional Cordless Circular Saw TP-CS 18/165 Li BL - Solo is compact and easy to handle for comfortable working. It is part of the Power X-Change family and is driven by an Einhell brushless motor for more power and a longer runtime. A 10-year motor warranty is offered after online registration. With its Ø 165 mm blade, it achieves cuts up to 59 mm deep at 90°. Safety features such as soft start and electric motor brake protect the user and the motor. Cutting aids like the rip fence and a robust saw table including a cutting line indicator ensure precise results. Supplied with a saw blade, without battery or charger.

OWER CHANGE

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Brushless motor more power and longer running time
- Brushless 10-year motor warranty after registration
- Comfortable working due to compact design
- Simple, tool-free adjustment (cutting depth, angle inclination)
- Easy saw blade change thanks to spindle lock
- High-quality aluminium saw table
- Rip fence for precise cuts
- Cutting line indicator for sawing after scribing
- Integrated LED light to illuminate the work area
- Vacuum adapter for a clean workspace
- Large handle with soft grip
- Soft start and electric motor brake protect user and motor
- Compatible with the Einhell guide rail
- Compatible with 16 mm and 20 mm bore diameter blades
- Incl. 1x carbide-tipped saw blade
- Supplied without battery and charger (sold separately)

Technical Data

- No-load speed 5000 min^-1 - Saw Blade Ø165 x Ø20 mm - Number of saw teeth 24 Pieces - Cutting depth at 90° 59 mm - Cutting depth at 45° 44 mm

Logistic Data

- Product weight 2.9 kg - Gross weight single packaging 4.2 kg

- Dimensions single packaging 333 x 193 x 317 mm

- Pieces per export carton 2 Pieces - Gross weight export carton 8.9 kg

- Dimensions export carton 400 x 347 x 336 mm - Container quantity (20"/40"/40"HC) 1120 | 2410 | 2800





















Available as special accessories



5,2 Ah Power X-Change Plus

Battery Item No.: 4511437

Bar Code: 4006825616606

Einhell Accessory



PXC+ 18V 4,0Ah SEALED Battery Item No.: 4511627

Bar Code: 4006825673227

Einhell Accessory



PXC+ 18V 3,0Ah SEALED

Battery

Item No.: 4511618

Bar Code: 4006825672794

Einhell Accessory



3,0 Ah Power X-Change Plus

Battery Item No.: 4511501

Bar Code: 4006825644197 Einhell Accessory



4,0 Ah Power X-Change Battery

Item No.: 4511396

Bar Code: 4006825610376 Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack

Battery Item No.: 4511526 Bar Code: 4006825656695

Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery Item No.: 4511631

Bar Code: 4006825673692

Einhell Accessory



2x2 Power X-Quattrocharger 4A

Charger

Item No.: 4512102

Bar Code: 4006825649536

Einhell Accessory



Power X-Twincharger 3A

Charger Item No.: 4512069

Bar Code: 4006825629729

Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



2x 4,0Ah & Twincharger Kit 1

PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040

Bar Code: 4006825613681

Einhell Accessory



PXC+ 18V 5-8Ah MULTI

Battery Item No.: 4511600

Bar Code: 4006825665055

Einhell Accessory



PXC+ 18V 4,0Ah Battery Item No.: 4511553

Bar Code: 4006825660869

Einhell Accessory



PXC 18V 3,0Ah

Battery

Item No.: 4511341

Bar Code: 4006825590593 **Einhell Accessory**

2,0 Ah Power X-Change

 
Battery Item No.: 4511395

Bar Code: 4006825610369 Einhell Accessory

4-6 Ah Multi-Ah Power X-Change

Plus

Battery Item No.: 4511502 Bar Code: 4006825644210



Battery Item No.: 4511629 Bar Code: 4006825673685

Einhell Accessory

2x18V 4,0Ah PXC-Twinpack CB

Battery

Item No.: 4511489

Bar Code: 4006825638578

Power X-Fastcharger 4A

Charger Item No.: 4512103 Bar Code: 4006825650228

Einhell Accessory

Power X-Car Charger 3A

Charger Item No.: 4512113

Bar Code: 4006825655377

Einhell Accessory

18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit

Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit Item No.: 4512143 Bar Code: 4006825667653 Einhell Accessory

E-Case L with wheels System Carrying Case Item No.: 4540014

Bar Code: 4006825660562

Einhell Accessory

Battery-Running-Times

One Battery for All	sawing ¹
	(m)
1.5 Ah	18
2.0 Ah	24
2.5 Ah	30
3.0 Ah	36
4.0 Ah	48
5.2 Ah	62
6.0 Ah	72
8.0 Ah	96

For best performance select a battery with at least 2.5 Ah

1) wood - chipboard 19 mm