



Einhell

PROFESSIONAL



Cordless Pruning Chain Saw

GP-PS 18/20 Li BL-Solo

Item No.: 4600080

Ident No.: 21014

Bar Code: 4006825683295

The Einhell Professional Cordless Pruning Chainsaw GP-PS 18/20 Li BL-Solo is part of the Power X-Change family and, with a 15 cm cutting length, is perfect for pruning, shaping, and cutting small timber. It is powered by the Einhell Brushless Motor, which delivers more power and a longer runtime. After online registration, the motor comes with a 10-year warranty. With a 19.2 cm bar length, 15 cm cutting length, and a chain speed of up to 8 m/s, the saw is ideal for flexible use. The bar and chain can be changed tool-free, and chain tensioning is also effortless. A hand guard, foldable chain cover, and soft-grip handle ensure safety and comfort. Supplied without a battery and charger.

Features & Benefits

- Member of the Power X-Change family, requires one 18V battery
- Brushless motor for enhanced power and longer runtime
- Motor warranty of 10 years with registration
- Perfect for pruning and shaping trees and shrubs
- Suitable for cutting green waste and timber
- High cutting performance with premium bar and chain
- Easy maintenance with tool-free bar and chain replacement
- Simple chain adjustment with tool-free tensioning
- Automatic chain lubrication for convenience
- Overload protection for extended motor lifespan
- Safe operation with hand and flexible chain guard
- Softgrip handle area for comfortable dual-hand use
- Slim and lightweight design for ergonomic working
- Bar protection cover for safe storage
- Oil filling funnel for clean refilling
- Delivered without battery and charger, available separately



TOOL-FREE BAR/CHAIN REPLACEMENT



AUTOMATIC CHAIN LUBRICATION

 
 


Technical Data

- Voltage	18 V
- Chain cutting speed	8 m/s
- Sword length	192 mm
- Max. cutting length	0.15 m

Logistic Data

- Product weight (kg)	1.379
- Gross weight (kg)	1.817
- Dimensions single packaging	490 x 170 x 120 mm
- Pieces per export carton	9 Pieces
- Gross weight of export carton	21 kg
- Dimensions export carton	520 x 515 x 380 mm
- Container quantity (20"/40"/40"HC)	1980 4140 4968

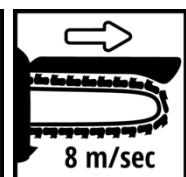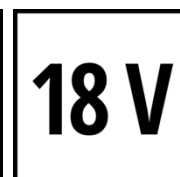

Available as special accessories



Ersatzkette 20cm 1,1 32T 7,62
Chain Saw Accessory
Item No.: 4501746
Bar Code: 4006825685060
Einhell Accessory



Ersatzschwert 20cm 1,1 SP6
Chain Saw Accessory
Item No.: 4501755
Bar Code: 4006825685053
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Battery-Running-Times



sawing¹
(pieces)

One Battery for All

1.5 Ah	100
2.0 Ah	134
2.5 Ah	168
3.0 Ah	201
4.0 Ah	268
5.2 Ah	348
6.0 Ah	402
8.0 Ah	536

Test setup:

1) softwood - round soft wood Ø 50 mm